


Step 1: Mark the proper installation position. Normally, 3m distance between road studs will be better.



Step 2: Use the core drilling machine to drill a hole according to the actual size of the shank. Dry the holes with a blowtorch and clean the hole.




Step 3: The epoxy glue ratio: A glue and B glue is 1:1. The glue should be mix well-distribute with the electric drill, 40-50g will be used for each stud.

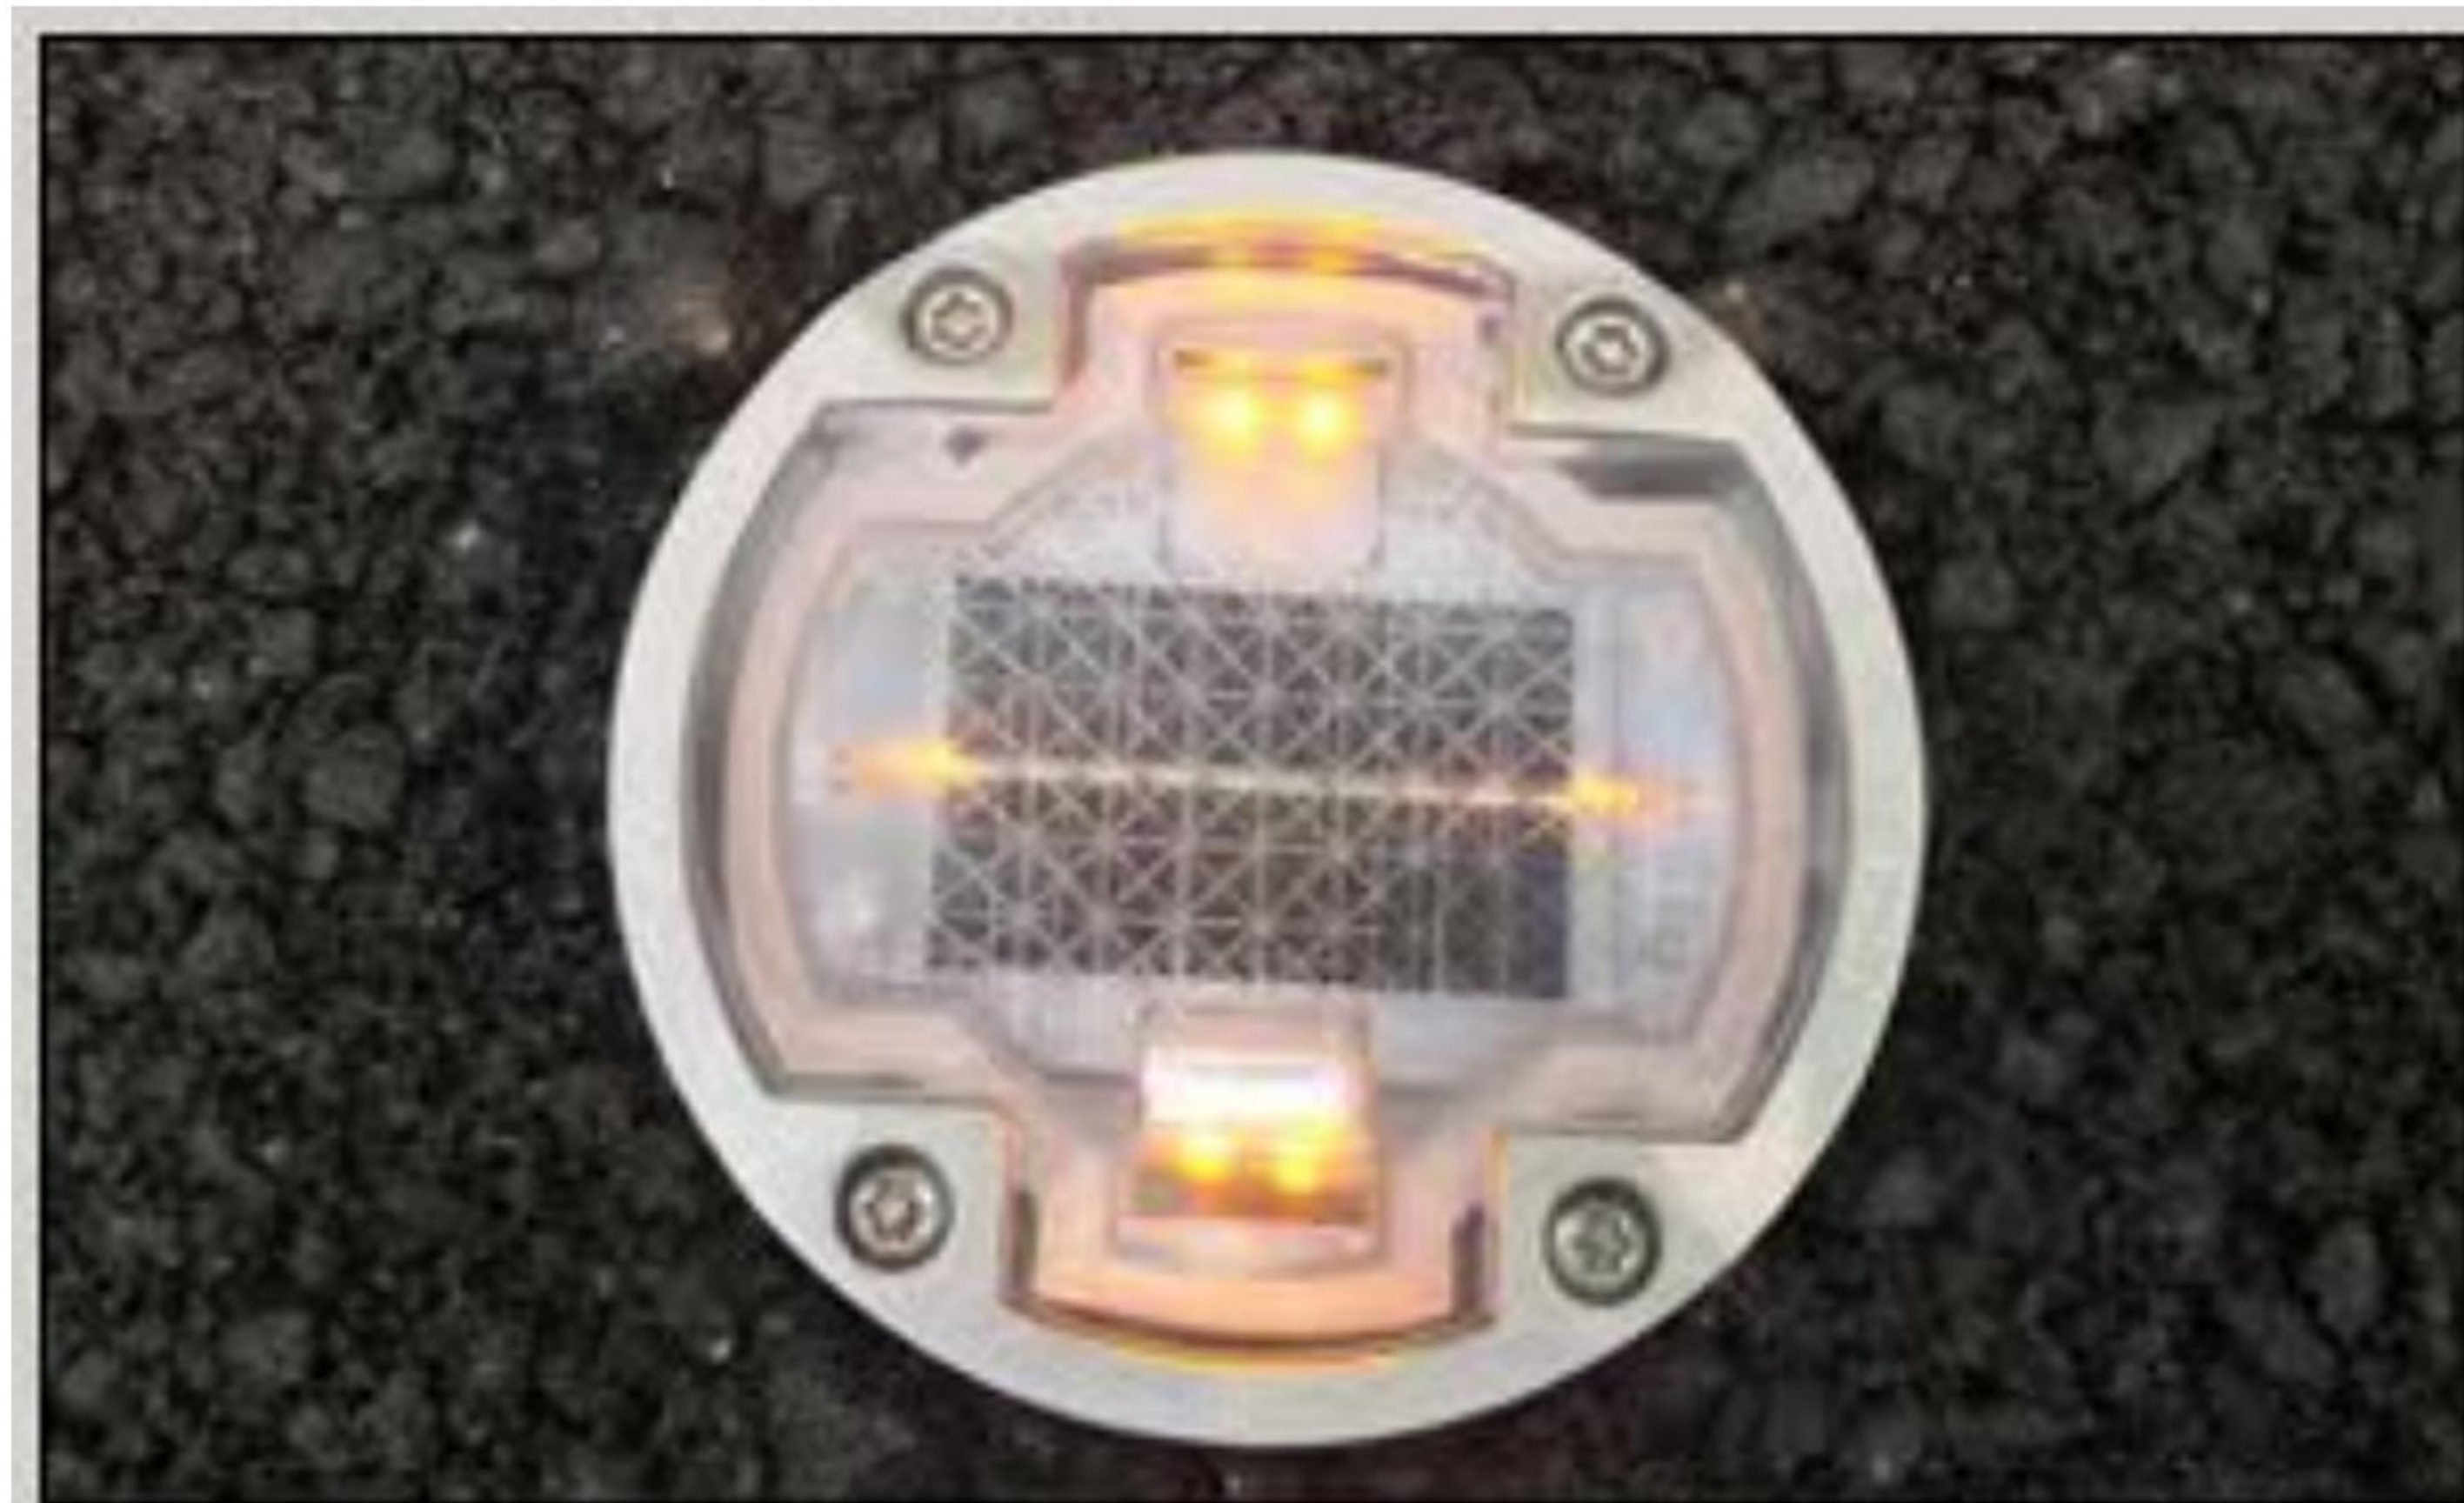

Step 4: Pour the glue into the hole, get to three quarters of the hole; Clean the bottom of the solar stud and put it into the hole.



Step 5: Use the knife to clean the surrounding overflow glue after the installation and remove all debris from the carriageway.

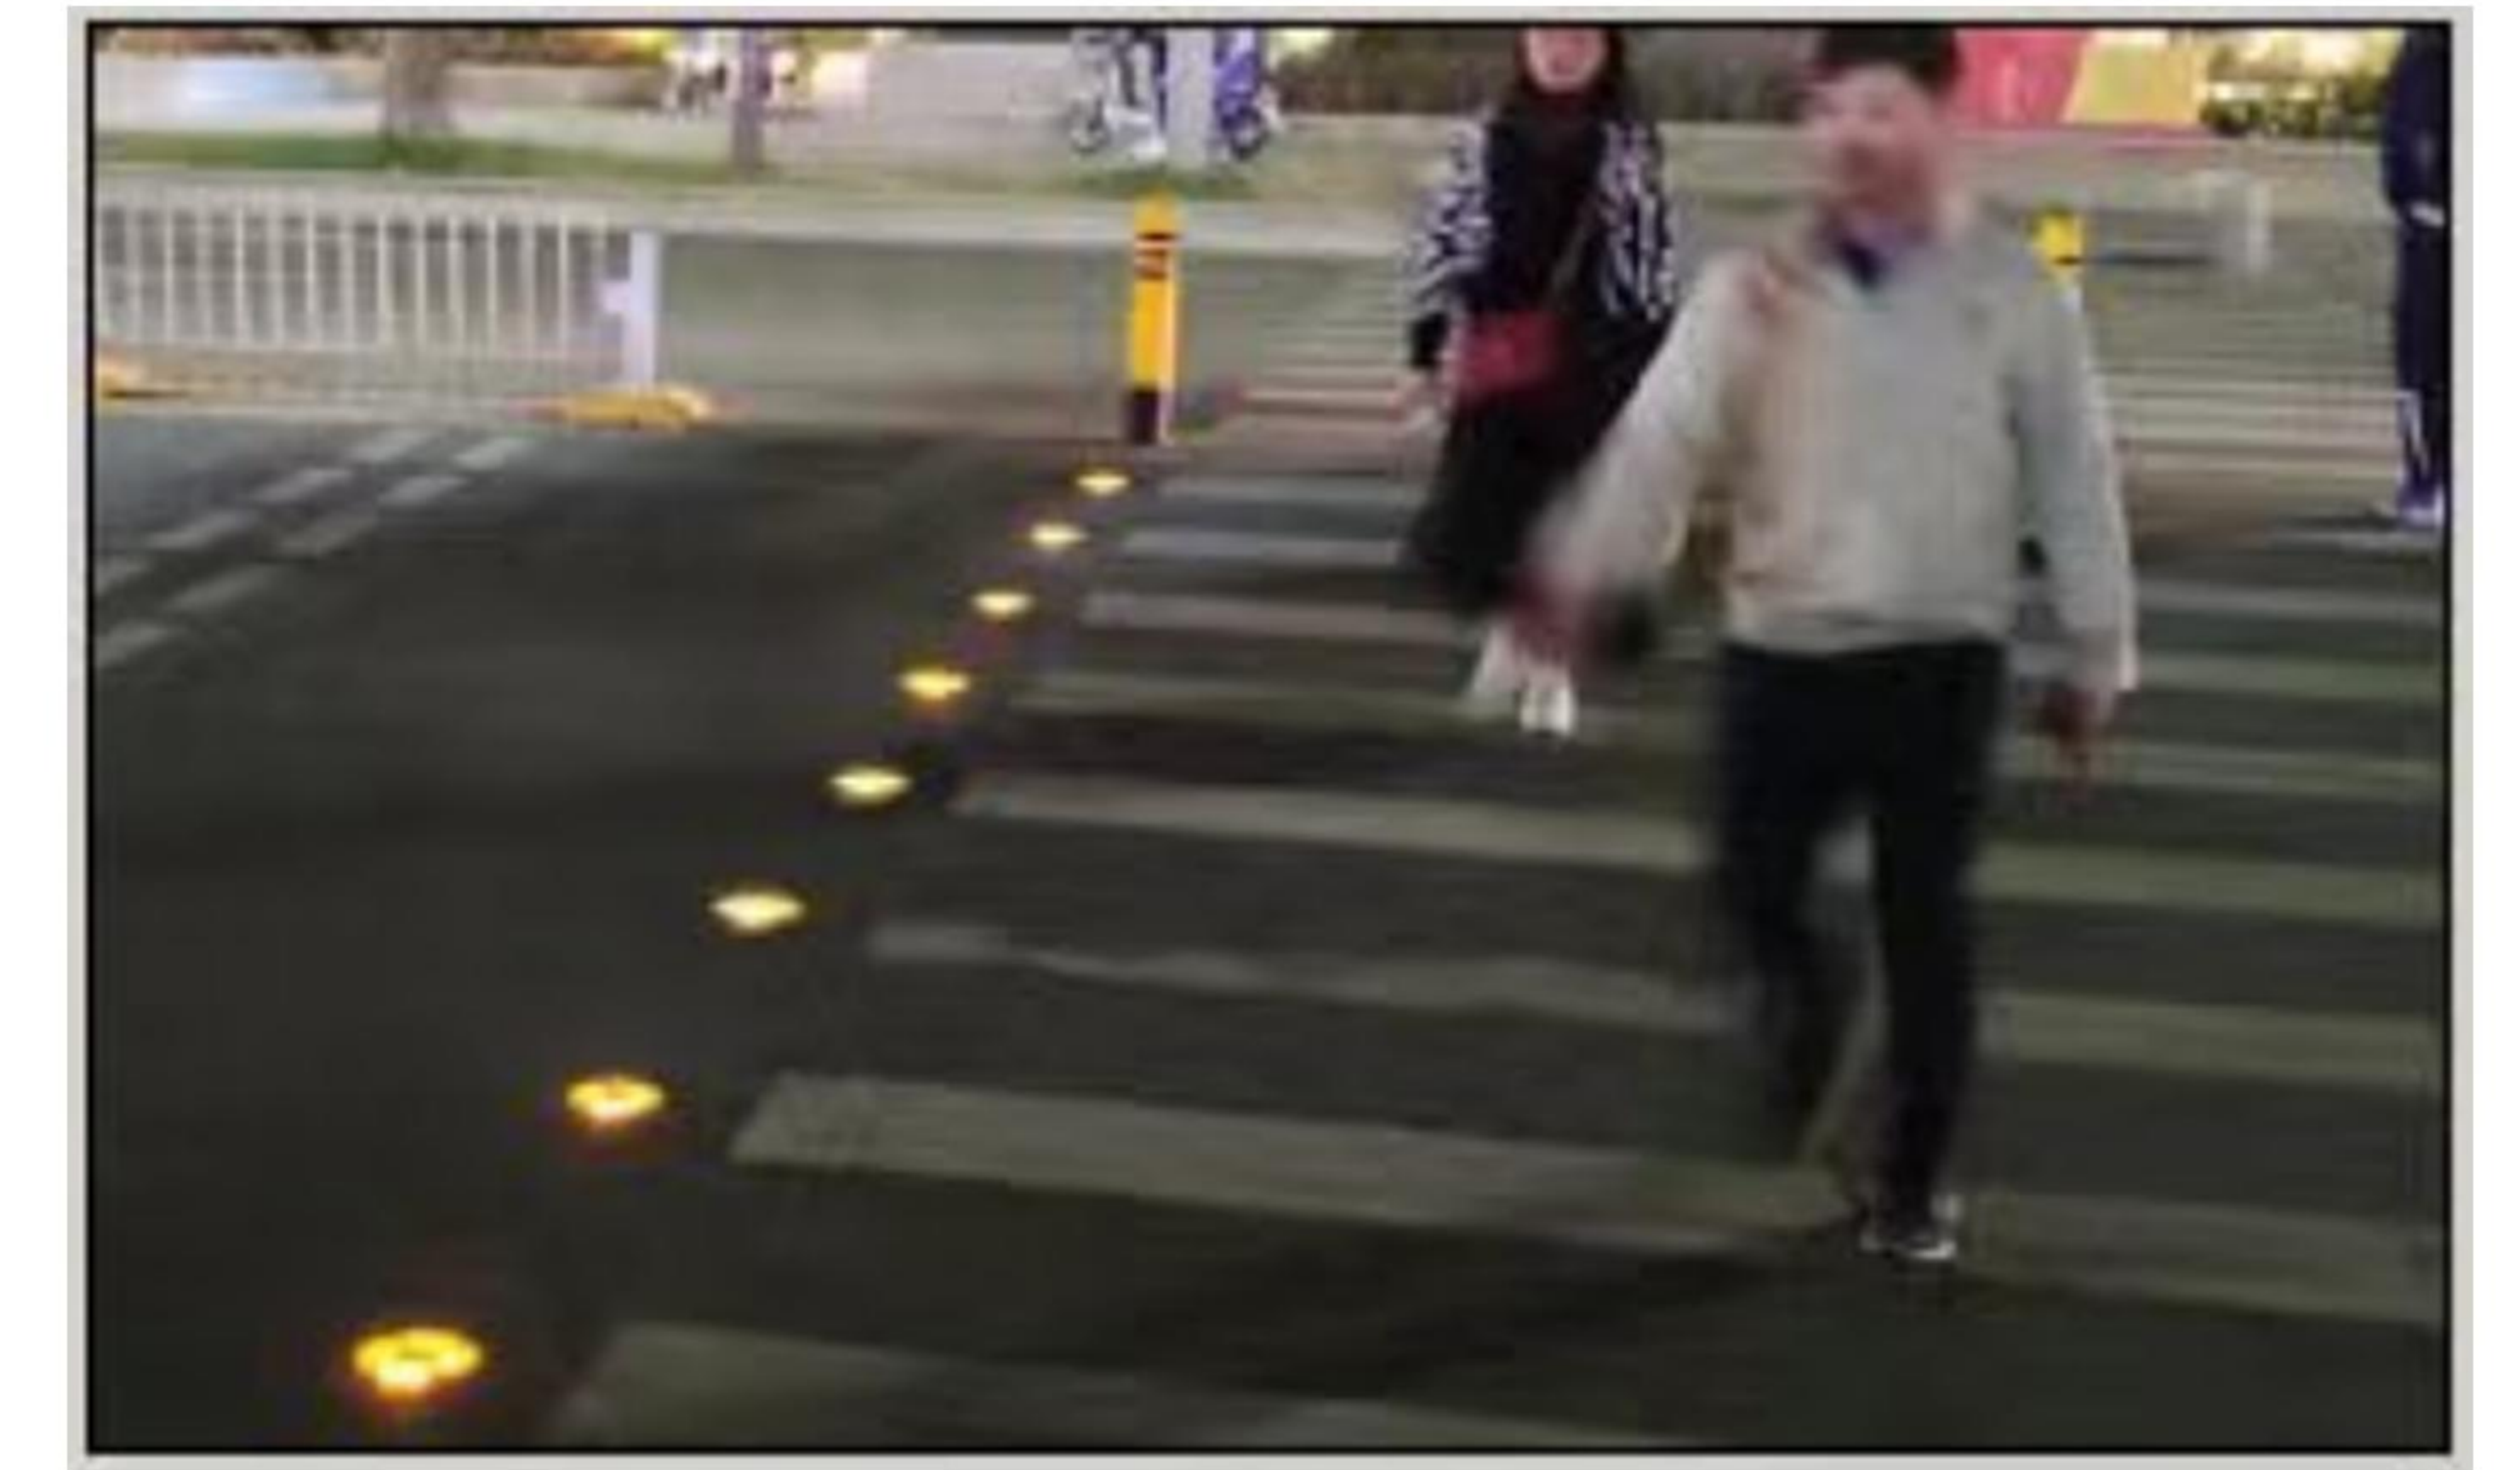

Step 6: Wait 8 hours for drying before activating solar stud.

 I-Road Technology

ROAD MARKING --2024.03

Installation Step By Step Instruction